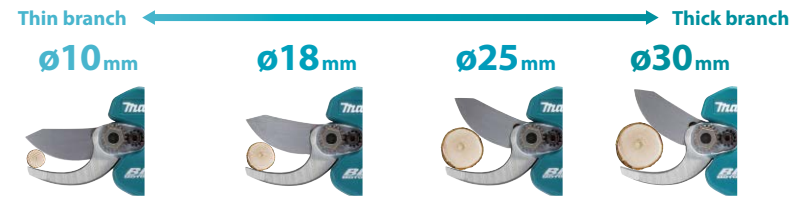


## ■ Cordless Pruning Saw

DUC150 18V

**Work amount**  
on a full battery chargeWhen cutting ø15mm branches  
of Japanese cypressabout  
**8,000 pcs.**  
Battery: BL1860B**Work amount**Test conditions:  
Cut ø50mm cedar rod under an  
optimal pressing load of 20N or  
less on cutting edge.  
Saw chain: 80TXL**210 pcs.**  
Battery: BL1830B

## ■ Accessories

**Shear blade U/L set**

Part No. 1916M8-3

Replacement  
upper and lower  
blades for Pruning  
shears**Long handle attachment set**

Part No. 1916B3-6

Attach the tool to this handle  
for easy pruning in  
hard-to-reach places.**Dressing stone set**

Part No. 1912E4-1

Dresser stone for Shear blade sharpening



## ■ Charging Time

	Fast Charge DC18RC	DC18SD
*1 BL1815N 1.5Ah 196449-1	<b>15 min</b>	<b>30 min</b>
*1 BL1820B 2.0Ah 197254-9	<b>24 min</b>	<b>45 min</b>
*1 BL1830B 3.0Ah 197599-5	<b>22 min</b>	<b>60 min</b>
*1 BL1850B 5.0Ah 197280-8	<b>45 min</b>	<b>110 min</b>
*1 BL1860B 6.0Ah 197422-4	<b>55 min</b>	<b>130 min</b>
BL1890 9.0Ah 1915H4-0	<b>85 min</b>	<b>200 min</b>
BL18120 12.0Ah 1915J2-8	<b>120 min</b>	<b>265 min</b>

\*1 Recommended battery

**Cordless Pruning Shears****DUP181**

Brake	Max cutting capacity	30 mm (1-3/16")
Torque limiter	Time from fully open to fully closed	0.34 sec
	Circumference of grip portion	125 mm (4-7/8")
	Vibration level	2.5 m/s <sup>2</sup> or less (EN62841-4-5)
	Uncertainty (K) for Vibration	1.5 m/s <sup>2</sup> or less (EN62841-4-5)
	Sound pressure level	70 dB (A) or less (EN62841-4-5)
	Uncertainty (K) for Noise	3 dB (A) (EN62841-4-5)
	Dimensions (L x W x H)	300 x 75 x 113 mm ( 11-3/4 x 2-15/16 x 4-7/16")
	(Battery)	BL1820B
	Net weight	1.1 - 2.1 kg (2.4 - 4.6 lbs.)
	(Battery)	BL1815N - BL18120

Standard Equipment : Blade cover, Hex wrench, Socket wrench

The net weight value includes the lightest and heaviest combination of the attachment(s) for normal and safe-use and battery cartridge(s) which are specified in the instruction manual.  
Items of standard equipment and specifications may vary by country or area.**Cordless Pruning Shears**  
**DUP181****Cordless comfort for sharp,  
smooth, and effortless pruning**

**Makita Singapore Pte Ltd**  
7, Changi South Street 3, Singapore 486348  
Phone : +65-6546-8700 Fax : +65-6546-8711  
Email : msgproductteam@makita.com.sg  
Website : www.makita.com.sg  
Facebook : www.facebook.com/MakitaSG



f MakitaSG



VISIT OUR WEBSITE



DOWNLOAD LEAFLET

PRINTED IN SINGAPORE





# Effortless pruning with clean, sharp cuts



The sensor built into the motor ensures smooth blade synchronization with the trigger. It offers excellent trigger responsiveness even at low speeds for precise pruning.



**Standby mode** (Green lamp blinks)  
Convenient for temporarily storing the tool in a holster between tasks. Pull and hold the trigger for approx. 3 seconds to fully close the blade. (To return to normal mode, pull the trigger twice.)


**Automatic power off**  
When left unused for 5 minutes  
Standby mode  
Green lamp blinks  
(Pull the trigger twice to resume.)

When left unused for 15 minutes  
Shuts down  
Green lamp turns off  
(To resume, press and hold the power button, then pull the trigger twice.)

**Cutting depth adjustment** (5 steps)  
Cutting depth can be adjusted after blade replacement. Close the upper blade and hold the angle adjustment button for more than 3 seconds.

Four adjustable opening angles to suit different branch sizes for enhanced efficiency

Angle adjustment button  
Press and hold this button to adjust the angle with the upper blade closed.

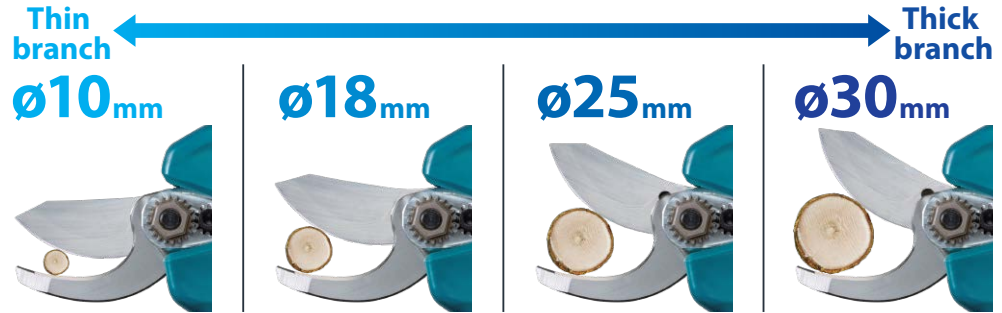

Blade oil can be applied from the outside without disassembly.

